 
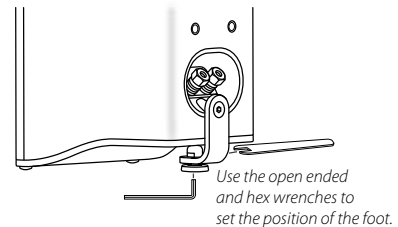 
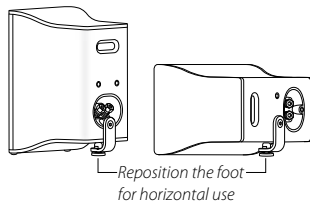 


Adjustable Feet

Each of the VS Series models, except VS 344, is equipped with adjustable feet that lets you change the vertical angle of the speaker to suit your installation.

The VS speakers are supplied with an open ended wrench and a hex wrench to set the position of the adjustable feet. Put the hex wrench in the hole in the bottom of the adjustable foot. Put the open ended wrench around the recesses in the base of the cap. Turn the wrenches to set the position of the foot.

The VS 336 and VS 344 are supplied with carpet spikes. If the speakers are placed on a carpeted floor replace the feet with the carpet spikes. This provides additional stability and coupling for the speaker. Care should be used with the carpet spikes to avoid damage to the floor or injury.

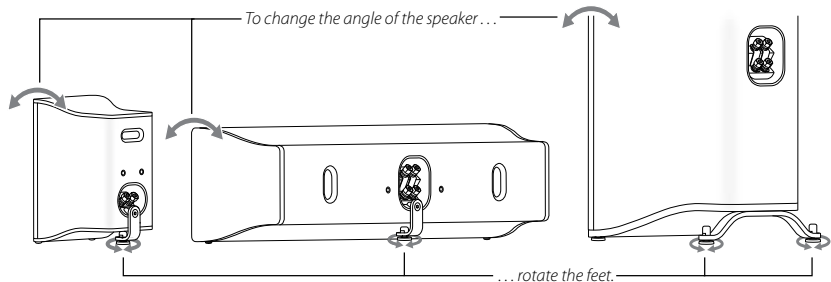 


this was corrected - the VS260 was taken out

Wall-Mounting

The VS 240, VS 224, and VS 325C can be wall-mounted using the supplied mounting bracket. Use the supplied hex wrench to remove the foot mounting screw and the foot. Then install the threaded mounting posts in the back of the cabinet.

Fasten the mounting plate to the wall with appropriate hardware. See the Note below. Be sure it is level. Connect the speakers. Insert the heads of the mounting posts through the keyhole openings in the mounting plate. Lower the speaker to seat the mounting posts in the mounting plate. When the speaker is positioned horizontally the vertically positioned keyhole openings are used.

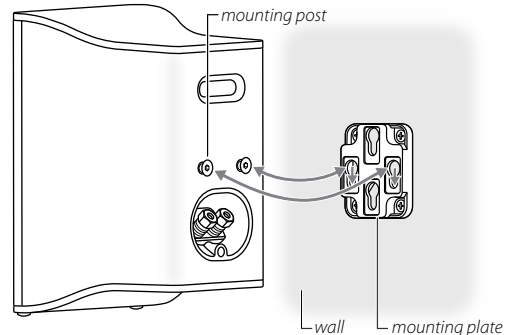

NOTE: The customer is responsible for the correct selection and use of mounting hardware (available through hardware stores) that will ensure the proper and safe wall-mounting of the speakers.


Note: these 2 pages are extracted from 142-003284-5 VS manual updated 11-AUG-09

Unpacking the System

Carefully unpack the speakers. If there is any sign of damage from transit, report it immediately to your dealer and/or delivery service. Keep the shipping carton and packing materials for future use.

The high-gloss finish of the VS Series cabinets is protected during shipment with a clear plastic film. Remove the film by lifting up a corner and carefully pulling it off. Repeat the procedure for all cabinet surfaces.

NOTE: The cloth grilles remain on the speaker during normal use. However, to remove a VS grille, place your fingers gently on edge of the grille and starting at one end of the speaker, pry along the length of the speaker until the grille pops off. To replace the grille, fit one long edge into position, and then gently push the other long side of the grille against the cabinet until the grille snaps into place.

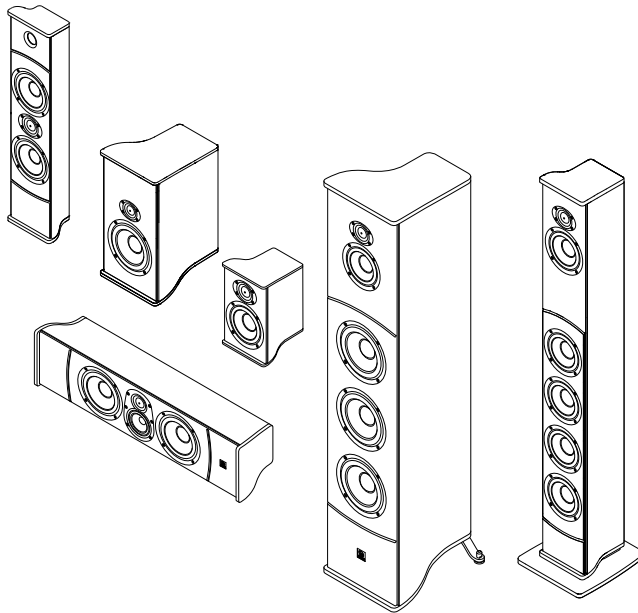

Placement Options

VS 336, VS 344 – These are classic floorstanding “tower” speakers. For best sound balance place it near an open wall surface, at least 3 feet (1m) away from the corners of the room.

VS 325C – This model is designed specifically for use as a center channel speaker in an A/V system. It should be centered on the television as close as possible to the screen. It can be placed either above or below the screen, on a shelf or wall mounted with the supplied bracket. Avoid placing the speaker in a semi-enclosed location. Such placement can produce undesirable sound characteristics.

VS 224, VS 260, VS 240 – These models can be used as the left, right, center or surround speakers in a stereo or multi-channel system. They can also be used as the left/right speakers in a stereo-only system. Each can be placed on a tabletop or a shelf, or wall-mounted using the supplied mounting bracket. The adjustable foot and the mounting bracket allow for vertical or horizontal orientation and optimal positioning.

this was not corrected to take out the reference to the VS260